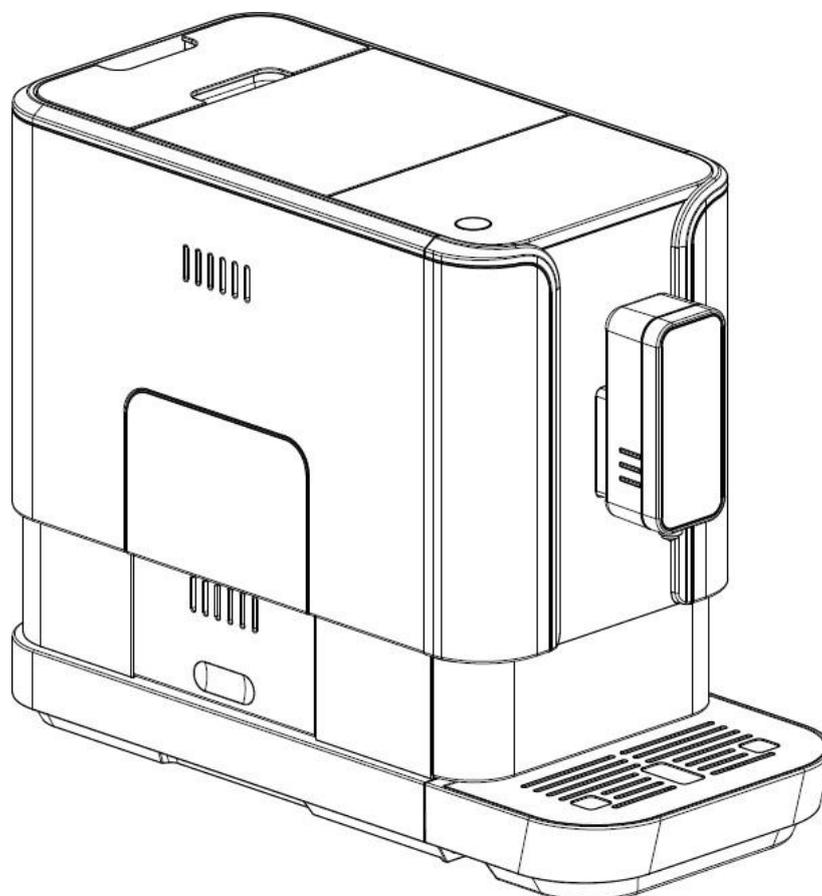


Superautomatic Coffee Machine Maurice Alisio



Instruction Manual

INDEX

A.	GET TO KNOW YOUR AUTOMATIC COFFEE MACHINE	5
I.	GENERAL DESCRIPTION.....	5
II.	ACCESSORY.....	6
B.	MACHINE INSTALLATION.....	7
C.	Daily Operation	8
I.	FILLING THE WATER TANK.....	8
II.	FILLING THE BEAN CONTAINER	9
III.	MAKING YOUR COFFEE	9
IV.	AMERICANO	10
V.	FAVOURITE FUNCTION.....	10
VI.	HOT WATER	11
VII.	DAILY CLEANING OF THE APPLIANCE.....	11
VIII.	Turning Off the machine.....	13
IX.	Auto-Shut off.....	13
D.	FURTHER SETTING.....	13
I.	ADJUSTING THE VOLUME OF YOUR COFFEE/HOT WATER.....	13
II.	GRINDING ADJUSTMENT.....	13
III.	MODE SELECTION.....	14
E.	CLEANING & MAINTENANCE	14
I.	DESCALING	14
II.	EMPTY SYSTEM FUNCTION.....	15
III.	MANUAL RINSING.....	16
IV.	CLEANING THE APPLIANCE.....	16
V.	Cleaning coffee powder outlet.....	16
F.	TROUBLESHOOTING	18

IMPORTANT INFORMATION

For safety purpose you should read the instructions carefully before using the appliance for the first time. Keep the instructions for future reference.

The appliance is designed for domestic use and may only be operated in accordance with these instructions for use.

Always handle with care and warn other users the potential danger.

These instructions shall also be available in an alternative format, e.g. on a website.

DANGER: Misuse of the appliance can cause injury!

DOs

1. Check the mains voltage stated on the rating plate corresponds to the local electricity supply.
2. Unwind and straighten the power cord before using the appliance.
3. Place the appliance on a firm and steady surface.
4. The appliance must be used and rested on a stable surface.
5. Disconnect the appliance from mains supply outlet under the following conditions:
 - Before the water tank is filled with water
 - Before removing any parts from the appliance or refit any parts on the appliance
 - Before cleaning or maintenance
 - When the appliance is not working correctly
 - After using the appliance
6. Empty the water tank, when the appliance is unused for long period
7. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Always use cold water to make coffee. Warm water or other liquids could cause damage to the coffee maker.
9. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid any hazard.
10. Use the grinder for grinding coffee beans only.
11. Children shall not be playing with the appliance.
12. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
13. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person concerning use of the appliance in a safe way and understand the hazards involved.
14. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
15. This appliance is designed for household use only.

DON'Ts

1. Do not allow children to touch the appliance or the power cord during the operation.
2. Do not use an extension power cord set unless competent authority has approved it.
3. Do not leave the appliance unattended, when it is connected to main supply.
4. Do not use the appliance in outdoor environment.
5. Do not use appliance for other than intended use.
6. Do not let cord hang over the edge of table or counter or touch hot surface.
7. Do not use or place the appliance on a wet or hot surface.
8. Do not use the appliance if the drip tray is not correctly positioned.
9. Do not immerse the appliance in water or any liquids.
10. Do not use the appliance when any parts of the appliance are damaged.
11. Do not use the appliance when it is not working properly.

1. Do not unplug the appliance by pulling the power cord.
2. Do not place the cord on a sharp edge of an item.
3. Do not attempt to open the main body or dismantle any parts from the appliance, there is no serviceable part inside.
4. The appliance normally cleans after use and is not intended to be immersed in water for cleaning and the appliance must not be immersed.
5. The use of accessories not included in the box is not recommended. It might be dangerous and should be avoided.
6. Do not place the appliance on or near hot gas or electric burner, or in heated oven.
7. **Do not operate the hot water function continuously for more than one tank of water.**

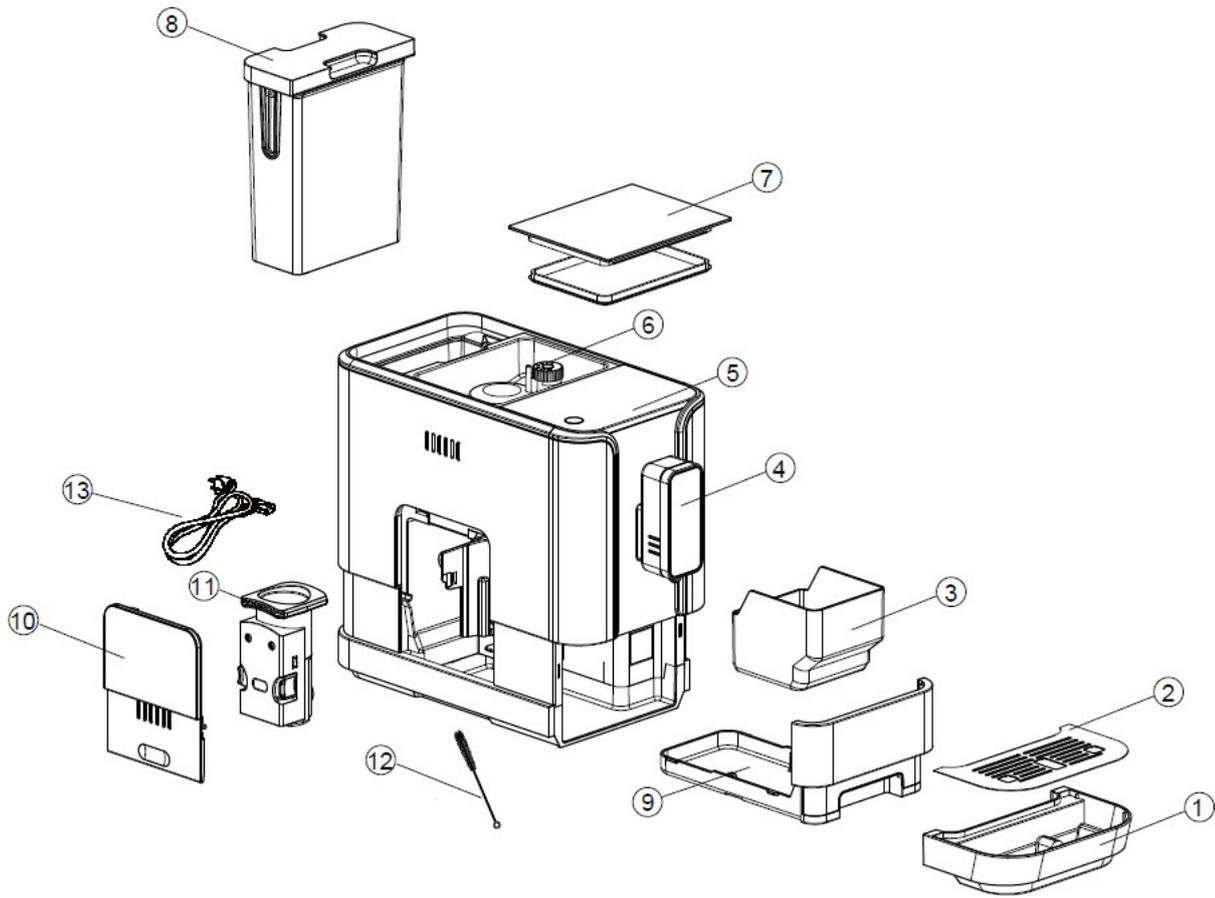


For electrical products sold within the European Community.

At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.



A. GET TO KNOW YOUR AUTOMATIC COFFEE MACHINE

I. GENERAL DESCRIPTION



1.	External drip tray	2.	Internal drip tray/Drip tray cover
3.	Coffee grounds container	4.	Adjustable coffee spout
5.	Control panel	6.	Coffee bean container
7.	Coffee bean container cover	8.	Water tank
9.	Internal drip tray	10.	Service door
11.	Brewer	12.	Cleanness brush
13.	Power Cord		

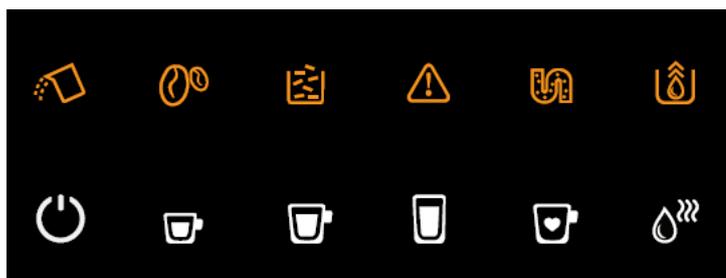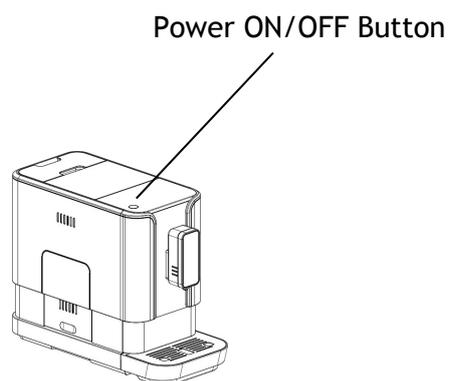CONTROL PANEL & ON/OFF BUTTON







	Flashing: Low water level/ Water tank missing
	Lack of bean
	Lights up stably: coffee grounds container is full Flashing: Internal Drip Tray/coffee grounds container is missing
	Lights up stably: Brewer is missing/ installed improperly Flashing: Service door is opened / installed improperly
	Lights up stably: Requires to do descaling Flashing: Descaling is under process
	Empty System Function is running
	Power ON/OFF Button
	Espresso button
	Lungo button
	Americano Button
	Favorite Coffee Button
	Hot water button

II. ACCESSORY

In the box, three packs of cleaning agents are included for the process of Descaling.

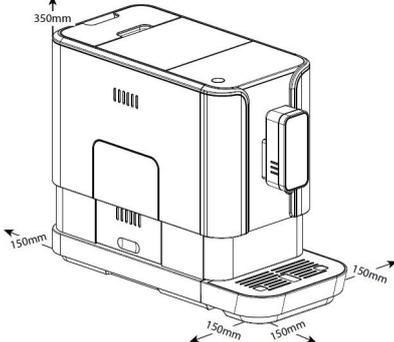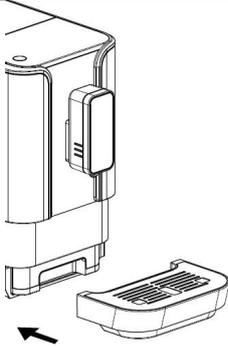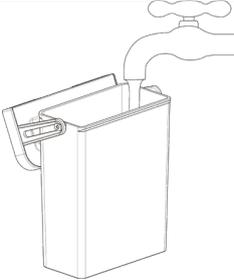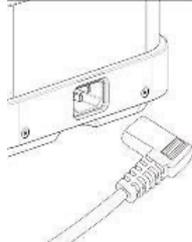B. MACHINE INSTALLATION


<p>1. Remove any protective films, stickers and any other packing material on the appliance</p>	
<p>2. Choose a safe and stable surface with an easily reachable power supply and allow minimum distance from the sides of the machines .</p>	
<p>3. Insert the external drip tray. Make sure it is inserted correctly.</p>	
<p>4. Fill the water tank with water (see "FILLING THE WATER TANK")</p>	
<p>5. Fill the bean box with coffee beans (SEE "FILLING THE COFFEE BEAN CONTAINER")</p>	
<p>6. Unwind and straighten the power cord and insert the plug into the socket located on the back of the machine. Insert the other end of the power cord into a wall socket with suitable power voltage.</p>	

C. Daily Operation


I. FILLING THE WATER TANK

When  is flashing, the water tank is in low water level and requires filling the water tank.

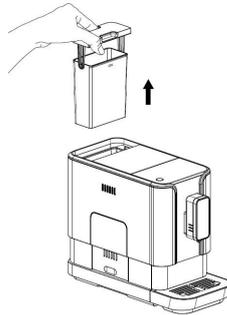
1. Lift the water tank by using the lid as the handle



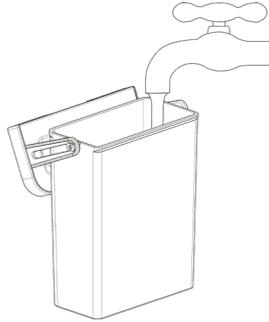2. Rinse the water tank with fresh water and then fill the tank to the “Max” level and place it back into the machine. Make sure it is fully inserted.



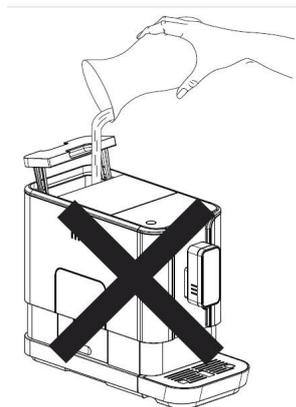Note: To prevent overflow of water from the water tank, do not add water directly into the appliance with another container




IMPORTANT: Never fill the water tank with warm, hot, sparkling water or any other liquid which might damage the water tank and the machine

II. FILLING THE BEAN CONTAINER

When  is flashing, the appliance needs to be filled with coffee beans:

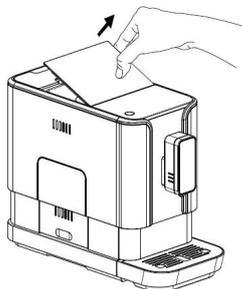1. Remove the bean container lid




2. Slowly pour in the coffee beans.
3. Install back the container lid.

IMPORTANT: Fill the coffee bean container with coffee beans only. Grounded coffee, instant coffee, caramelized coffee and any other objects may damage the machine.

III. MAKING YOUR COFFEE

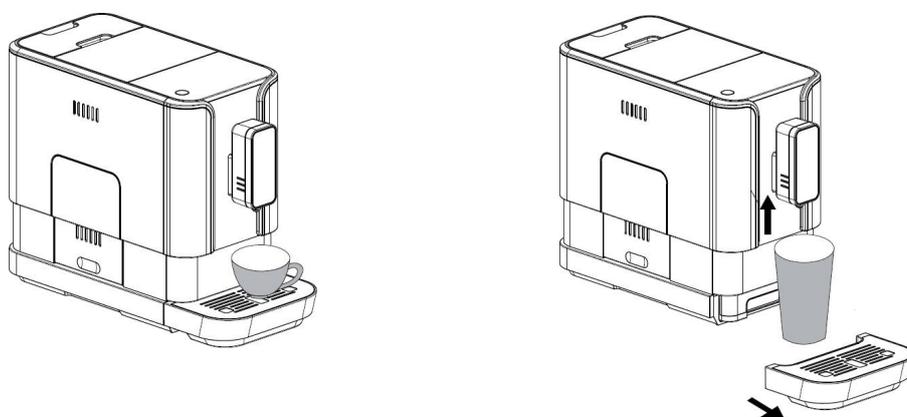1. Switch on the appliance by pressing the power on/off button and make sure the drip tray is under the coffee spout and water tank is full. The appliance will perform auto-rinsing for a small cup of water, you can stop it by pressing Hot Water Button.
2. The appliance is then in the standby condition.
3. Place a cup under the coffee spout and adjust the height of the spout to fit the cup. Depending on the size of the cup (too high or too wide) you can remove the drip tray or adjust the position of the drip tray as follows:



4. Depending on the coffee taste desired, press the espresso button  or the lungo button .

1. The coffee button being pressed will light up, brewing coffee indicator and illumination under spout will light up to indicate that the appliance is preparing the cup of coffee. You can stop dispensing coffee by pressing the button again
2. When the appliance is back to standby condition, the coffee is ready to serve.

Tip 1: The volume of the espresso coffee dispensed in the cup can be adjusted as desired (see page 12, section D “further settings”).

Tip 2: The auto rinsing would not appear if the appliance is just switched off for a while. You can deactivate this function by following the steps and activate this function by the same way.

Step 1) remove the service door

Step 2) press On/Off button until a bit sound appears.

Note: Press the hot water button (see page 9 section IV) to clean inner parts of the coffee maker before first use.

IV. AMERICANO

Pressing the Americano button  will dispense Americano coffee. When pressed, the Americano button and the corresponding indicators light up to indicate that the appliance is preparing an Americano. The appliance will dispense coffee first and then come with hot water. You can stop dispensing coffee or hot water by pressing the button again

V. FAVOURITE FUNCTION

You can use the favourite function to memorize your desired volume of mild coffee, strong coffee and Americano coffee which is not easy to be adjusted by other people

1. Set up the favourite coffee setting

a) Press and hold the favourite button  for 2 seconds. The lungo, espresso and Americano buttons flash. You can select any one to memorize the volume.

b) Once you have selected espresso, lungo or Americano mode, the corresponding drink will be dispensed. You can press and hold to keep dispensing the drink, or stop it by releasing the button. After that the volume will be memorized.

2. Using the favourite function

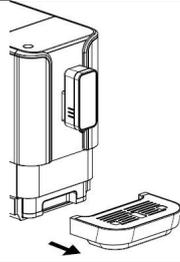
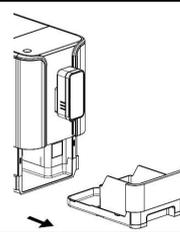
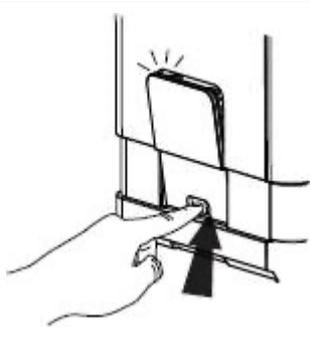
a) Press the favourite function button , the memorized favorite drinks will come out.





VI. HOT WATER

The appliance can dispense hot water by simply pressing the hot water button . The hot water button lights up, brewing coffee indicator and illumination under spout will lights up indicates that the appliance is heating up the water. When the hot water button and the illumination turn off, the water is ready to serve.


VII. DAILY CLEANING OF THE APPLIANCE

Timely cleaning and maintenance of the appliance is very important in prolonging the life of the appliance.

<p>1. Remove the external drip tray.</p>	
<p>2. Empty the water in the drip tray into the sink and wash it out with water. Dry it afterwards.</p>	
<p>3. Slide and remove the inner drip tray and the coffee grounds container.</p>	
<p>4. Empty the coffee grounds container and wash it with fresh water. Dry it afterwards.</p> <p>Note: When  lights up, the coffee grounds container needs to be empty.</p>	
<p>5. Pull down the service door.</p>	
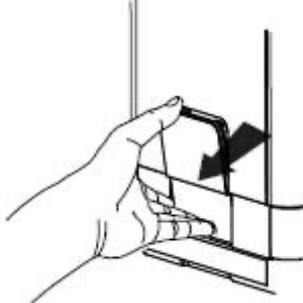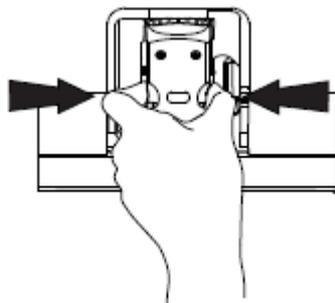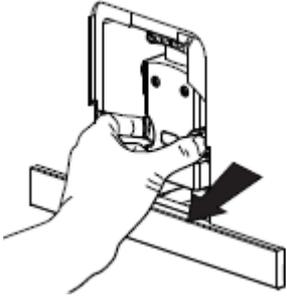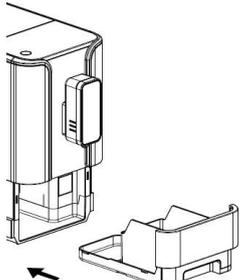
<p>6. Remove the service door.</p>	
<p>7. Press the release knob.</p>	
<p>8. Remove the brewer assembly.</p>	
<p>9. Wash the brewer with fresh water. Dry the infuser assembly.</p>	
<p>10. Insert back the brewer to its original position and install back the service door to its original position.</p> <p>Note: When  lights up stably, it indicates that the brewer is missing / installed improperly.</p> <p>When  is flashing, it indicates that the service door is missing/ installed improperly.</p>	
<p>11. Place the coffee grounds container on the drip tray inside and return it to its original position.</p> <p>Note: When  flashing, the coffee grounds container is missing.</p>	

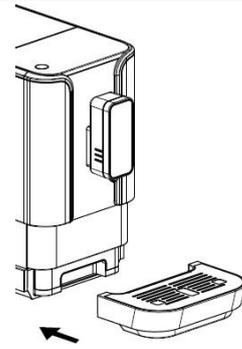12. Refit the external drip tray to its original position.



VIII. Turning Off the machine

Switch off the appliance by pressing the power on/off button.

IX. Auto-Shut off

The Appliance is equipped with auto-shut off. Depending on the mode you have selected the appliance will have different auto-shut off timing (SEE “D. Further Setting - III Mode Selection”).

D. FURTHER SETTING

I. ADJUSTING THE VOLUME OF YOUR COFFEE/HOT WATER

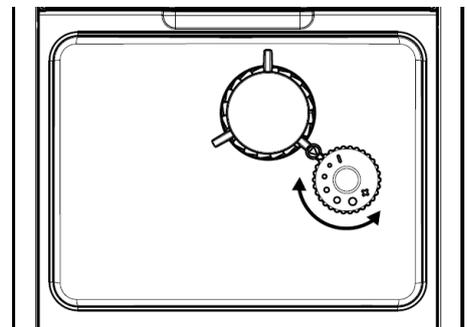
You can memorize your desired volume of coffee for strong coffee, mild coffee, Americano and also the hot water from 25ml to 250ml.

1. When making your coffee (either strong coffee or mild coffee or Americano) or dispensing hot water, press and hold the button you selected. The appliance will continue to make the cup of coffee or hot water.
2. When the volume of coffee meets your desired volume, release the button. Two beep sounds will be heard indicates that the volume of coffee is being memorized.

II. GRINDING ADJUSTMENT

You can adjust the grinder to suit the taste of your coffee by turning adjuster knob in the bean container:

1. When the grinder is grinding the coffee beans during making the coffee, you can turn the adjust knob to do the adjustment (CAUTION: Never do the grinding adjustment when the grinder is not operating. It may damage the grinder.)
2. The dots on the adjuster knob indicate the fineness of the grind.



III. MODE SELECTION

The machine has two different settings: default setting, ECO mode and speed mode. In ECO mode, the appliance helps to save more energy. In speed mode, the user can make their coffee faster than in default setting.

	Speed Mode	Default Setting	ECO Mode
Light on	Yes	Yes	No
Pre-brewing*	No	Yes	Yes
Auto shut off time	30mins	20mins	10mins
Cup Volume memory	Yes	Yes	Yes

*Note: The pre-brewing function moistens the grounded beans in the brewer with a small amount of water before full extraction. This expands the coffee grounds to build up a greater pressure in the brewer which help extraction of all the oils and full flavor from the grounded beans.

1. When the machine is in standby, press and hold  for 5 seconds.

2. The indicator  will flash and the following will be displayed in different settings:

	Hot water button 	Strong coffee button 	Mild coffee button 
In ECO Mode	Light on	Flashing	Flashing
In Speed Mode	Flashing	Light on	Flashing
In Default Setting	Flashing	Flashing	Light on

3. Press the hot water button for ECO mode, strong coffee button for speed mode and mild coffee button for default setting. Two beep sound will be heard indicates that the mode is being selected. (Note: If you are pressing the relative lighted on button for each mode, the machine will not respond).

4. If you want the setting to remain unchanged, press  again or wait 5 seconds for the machine to return to standby.

E. CLEANING & MAINTENANCE

I. DESCALING

When  flashes, it means that the appliance requires descaling. The appliance will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of water used. It is also suggested that to

1. Fully fill the water tank.

2. Add one pack of cleaning agent included in the box to the water tank.

IMPORTANT: Do not use vinegar or other cleaning agent to do descaling of this appliance. The cleaning agent might damage the appliance.

3. Plug in the appliance.

1. Place a sufficient large container under the coffee spout.
2. In stand-by mode, press and hold  and the espresso button  for 5 seconds. Two beeps will be heard and the indicator  and espresso button  will flash.
3. Press the espresso button  to confirm the descaling procedure. To return to standby, press .
4.  The flashing indicator shows that the appliance is descaling. **(Caution: Keep skin/body away from the hot water.)**
5. When all the water in the tank has been dispensed, the buttons  and espresso  flash. Remove all the remaining solution in the water tank and fill the tank with normal tap water to the “max” position. Once the water tank is filled,  will switch off. Then the appliance will continue the descaling process, the appliance will brew half of water tank first and then waiting for around 1min, after that will brew the outstanding water from the water tank.
6. When the descaling process is completed, the appliance will switch off automatically.

Note: To ensure the descaling process can be completed, please be patient during the process and make sure the applicant switch off automatically

II. EMPTY SYSTEM FUNCTION

The empty system function is recommended to be used before long period of non-use, frost protection and before taking to repair agent.

1. In standby mode, press and hold  and espresso  buttons for 5 seconds.
2. The indicator  begins flashing.
3. Remove the water tank from the appliance.  The indicator will light up and remain lit to indicate that the system is being emptied. You can press  before removing the water tank to return to standby.
4. When the empty system function is completed, the appliance will switch off automatically.

Important: After performing EMPTY SYSTEM FUNCTION; press the hot water button until water come out from spout when the coffee maker is reused again.

III. MANUAL RINSING

You can perform a manual rinsing cycle to clean the coffee spout after use. It is also suggested to perform a manual rinsing if the appliance has not been used for a long period of time.

1. In stand-by mode, press and hold the  button and the hot water button .
2. Hot water button will be flashing. The coffee spout will then dispense a small amount of water which is used for the rinsing.

Danger: The water exiting the dispensing spout is hot and is collected in the underlying drip tray. Avoid contact with splashes of water.

3. After rinsing, the appliance will return to the standby condition.

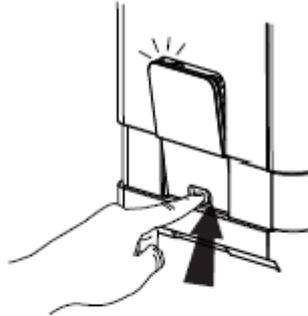
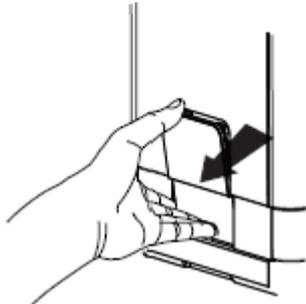
IV. CLEANING THE APPLIANCE




1. Disconnect the power cord from the mains supply outlet.
2. Pour all the water contained in the internal and external drip trays
3. Use a dampened cloth or non-scratching cleaner to clean the water stains on the appliance.

IMPORTANT: Never use any abrasive, vinegar or descaling agents not included in the box to clean the appliance.

V. Cleaning coffee powder outlet

Coffee powder may stick on the wall of powder outlet for appliance after used a long period of time. It is suggested to clean the outlet by following steps to ensure that coffee powder can come to brewer.

1. Push the service door recess area	
2. Take out the service door	
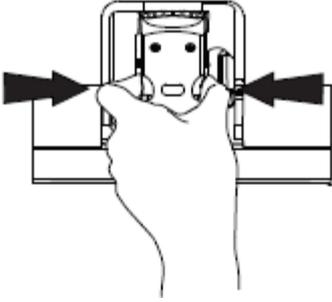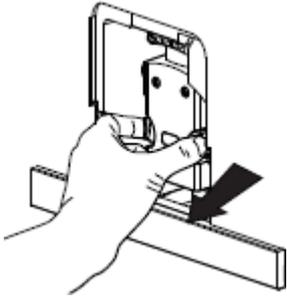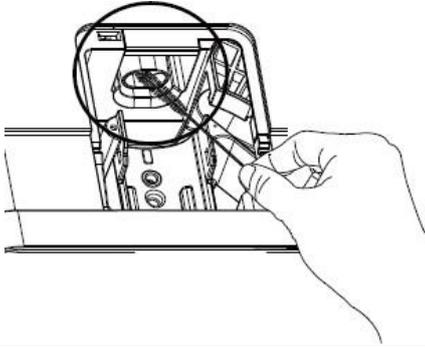
<p>3. Press the release knob of brewer</p>	 A line drawing of a hand with the index finger pressing a small rectangular knob on the front of a coffee brewer. Two large black arrows point horizontally outwards from the knob, indicating the direction of force.
<p>4. Take the brewer out</p>	 A line drawing of a hand pulling the coffee brewer out of its housing. A large black arrow points downwards and to the right, indicating the direction of removal.
<p>5. Use Cleanness Brush to clean the powder outlet</p>	 A line drawing of a hand using a brush to clean the powder outlet of the coffee brewer. A circular magnifying glass is positioned over the outlet area to show the cleaning process in detail.

F. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not work.	The appliance is not connected to the mains supply.	<ul style="list-style-type: none"> - Plug in and press the on/off switch. - Check the cable and the plug
No or delayed response in several trials of pressing on function key on the panel	<ul style="list-style-type: none"> - Appliance is under an electromagnetic interference - Dirt over the panel 	<ul style="list-style-type: none"> - Unplug the appliance. Restart after few minutes - Clean the panel with the cloth provided
The coffee is not hot enough.	<ul style="list-style-type: none"> - The cups have not been preheated. - The dispensing assembly is too cold 	<ul style="list-style-type: none"> -Warm the cups - Rinse the appliance at least 3 times before making coffee, using the coffee button
The coffee cannot come out from spout.	Empty system function maybe used before.	Press the hot water button until water can come out from spout.
The first cup of coffee is poor quality.	The first run of grinder does not pour sufficient quantity coffee power into the brewing unit.	Throw the coffee away. The other coffees will always be of good quality.
Coffee has no cream.	- Coffee bean is not fresh.	Change or use appropriate brand of coffee bean.
The touch buttons are not sensitive	The touch button was not pressed correctly	Press the button with the illuminated icon you wish to select–
The appliance takes too long time to warm up.	Excessive scale has built up.	Descal the appliance.
The water tank is removed / the water level is very low in the water tank but indicator have no alert.	The surface where the tank rests on the bottom of the machine is wet	Clean and dry the bottom of the canister compartment. Insert the canister making sure it is pushed all the way to the bottom
The internal drip tray fills with too much water.	Coffee powder too fine which block the water to come out.	Adjust the coffee fineness to bigger dot during grinder operation.
Coffee is delivered too slowly or a drop at a time.	Coffee powder too fine which block the water to come out.	Adjust the coffee fineness to bigger dot during grinder operation.
Lack of bean indicator flashes but there is still a lot of coffee bean inside the container.	Internal coffee powder outlet is blocked.	To follow the steps of section E (V. Cleaning coffee powder outlet).
Descaling indicator keep flashing even perform descaling process	The process not completed	To follow the steps of “Descaling” and make sure the appliance switch off automatically

Gimoka Group
Via F.lli Gracchi, 42 - Cinisello Balsamo (MI)



ATTESTATION OF CONFORMITY

Issued to: TUNBOW GROUP LIMITED
BLK A 10/F CHUNG MEI CENTRE 15 HING YIP ST KWUN TONG, HONG KONG

For the product: Espresso coffee maker

Trade name: **TUNBOW**

Type/Model: 8510-0, 8511-0, 8520-0, 8521-0, 8200-0, 8210-0, RH-T8210, 8212-0, 8220-0, 8221-0, 8230-0, RH-T8220, RH-T8230, 8300-0, 8320-0, 8301-0, 8321-0, 8330-0, 8331-0, 8230-1, 8235-0, 8512-0, 8530-0, 8531-0, 8535-0, 8535-1, 8910-0, 8911-0, 8920-0, 8921-0, 8930-0, 8931-0, 8935-0, 8935-1, 8110-0, 8120-0, 8130-0, 8215-0, 8215-1, 8920-1

Ratings: 220-240 V~, 50 - 60 Hz, 1235-1470 W, class I;

Manufactured by: TUNBOW GROUP LIMITED
BLK A 10/F CHUNG MEI CENTRE 15 HING YIP ST KWUN TONG, HONG KONG

Requirements: EN 60335-1:2012 + A11:2014 + A13:2017 + A1:2019 + A14:2019 + A2:2019
EN 60335-2-15:2016 + A11:2018
EN 62233:2008

This Attestation is granted on account of an examination by DEKRA, the results of which are laid down in a confidential file no 4377872.50.

This Attestation implies that the examined types are in accordance with the standards designated under the Low Voltage Directive (LVD) 2014/35/EU.

The examination has been carried out on one single specimen or several specimens of the product, submitted by the manufacturer. The Attestation does not include an assessment of the manufacturer's production. Conformity of his production with the specimen tested by DEKRA is not the responsibility of DEKRA.

Amhem, 29 July 2021

Number: 4377872.01AOC

DEKRA Testing and Certification (Shanghai) Ltd.,
Guangzhou Branch

Miranda Zhou
Certification Manager

© Integral publication of this attestation and adjoining reports is allowed

DEKRA Testing and Certification (Shanghai) Ltd., Guangzhou Branch
No.3, Qiyun Road, Huangpu District, 510663 Guangzhou, Guangdong, China
T +86 20 6661 2000 F +86 20 6661 2001 www.dekra-product-safety.com